



BeCode AIR/AIR+ Deprogramming Instructions:

Main-Admin Card:

1. The Main-Admin card CANNOT be deprogrammed by the customer. If the Main-Admin card is lost, The BeCode AIR has to be sent back for reactivation.

Admin Card:

1. Hold the Main-Admin card in front of the BeCode AIR for about 2-3 seconds. The AIR lock will bling green, then red.
2. Place Admin card to be deprogrammed in front of the AIR lock until it blinks red twice. (Repeat procedure to ALL Admin cards in need of de-programming.)
3. Once all Admin cards have been deprogrammed, hold the Main-Admin card in front of the AIR for 2-3 seconds to complete the procedure. The AIR lock will blink green, then red.

Individual Keycard:

1. Hold the Admin card in front of the BeCode AIR for about 10seconds. The AIR lock will blink green, then red.
2. Place the Keycard to be deprogrammed in front of the AIR lock until it blinks red twice. (Repeat procedure to ALL Keycards in need of deprogramming.)
3. Once all Keycards have been deprogrammed, hold the Admin card in front of the AIR lock for 2-3 seconds to complete the procedure. The AIR lock will blink green, then red.

All Keycards:

1. Hold the Admin card that was used to program the keycards in front of the BeCode AIR lock until it blinks red twice (approx.20 seconds)
- All Keycards that were programmed with this Admin card will be deprogrammed at the same time.
 - If several Admin cards were used, this procedure will have to be carried out separately for each Admin card.
 - The Admin card remains valid.



BeCode AIR+/AIR User Instructions

AIR+/AIR factory setting: Free Mode

Assigned Locker:

- *Place *assigned* RFID Card to the face of the AIR+/AIR lock (See programming instructions)
- *You can now open the door by turning the lock.
- *Place items in locker, turn lock.
- *The lock will automatically lock after 4 seconds.

Free Locker:

- *Place items in any locker close door.
- *Place compatible RFID card to the face of the AIR+/ AIR lock.
- *Close locker door and turn lock.
- *To open the lock, place the same RFID card used to lock the AIR+/AIR lock.
- *Turn knob, open the door.
- *The lock will remain open until a new/same RFID card is placed to the face of the lock.



BeCode AIR/AIR+:

Main Admin card- Used to program Admin Cards (No unlocking function)

Admin Card- Used to program Keycards (No unlocking function)

Keycard- Only card with unlocking function

BeCode AIR Programming Instructions:

Main-Admin Card:

- 1 Hold the Main-Admin card in front of the BeCode AIR for 2-3 seconds. The AIR lock will blink green, then will blink red.
- 2 Wait 10 seconds before programming the Admin Cards.

Admin Card:

1. Hold the Main-Admin card in front of the BeCode AIR for 2-3 seconds. The AIR lock will blink green, then will blink red.
2. Next, place the Admin card in front of the BeCode AIR for 2"-3 seconds. The AIR will blink green, then will blink red. (Repeat procedure to program all Admin cards needed. MAX:5 Admin cards per lock)
3. After that, hold the Main-Admin card once again in front of the AIR lock for 2-3 seconds to complete the procedure. The AIR lock will blink green and red once again.

Keycard:

1. Hold the Admin card in front of the BeCode AIR for 2-3 seconds. The AIR lock will blink green, then red. Then hold the Keycard in front of the BeCode AIR lock for 2-3 seconds. The AIR will blink green and then red again. (Repeat this procedure to program all Keycards needed.)
2. After programming the last keycard, hold the Admin card in front of the AIR lock for 2-3 seconds to complete the procedure. The AIR lock will blink green, then red once again.